

# Update to Renesas R-Car Gen 2 support for Genivi 10

## Developer summary

I have pushed updates to the previous Beta release of Renesas R-Car Gen 2 support for the Genivi 10 Yocto Baseline to github [1].

They have been pushed to the new product branch "[genivi-10-bsp-1.10.0](#)". This replaces the previous working branch "[stevel/genivi-10](#)" which is now deprecated and will be later deleted.

[1] <https://github.com/slawr/meta-renesas/tree/genivi-10-bsp-1.10.0>

## Developer Notes

In summary there have been the following major changes:-

- Fix "full path to dts" kernel bitbake build warning
- Fix "license listed foo was not in the licenses collected" bitbake build warning
- Various readme updates or improvements
- Added sample local.conf and bblayers.conf
- Kernel config changed to receive bootargs for u-boot when combined ulmage+dtb image used

For those who like a graphical diff you can find a Github compare [here](#).

The following sections explain some of these in more detail including a migration guide.

## Yocto Bitbake Warnings

The updates address two bitbake warnings. The first addresses a malformed recipe variable that resulted in bitbake raising a license warning. The other addresses a bitbake kernel build warning related to dts/dtb files.

## Migration Guide / Behavior changes

### U-boot

The Yocto board machine files, e.g. [porter.conf](#), now default to the setup for Wayland/Weston. This means you no longer need to set this explicitly yourself in your local.conf.

### Sample local.conf and bblayers.conf

The Yocto BSP supports multiple boards so it is impossible to add a local.conf.sample and bblayers.conf.sample that covers all boards. Examples for the different boards are available upstream, but I can see the value of having a sample within the Yocto BSP itself.

The [commit](#) adds a bblayers.conf.sample that should be applicable for all Gen 2 boards. The local.conf.sample is for the Porter board. For other boards change the [MACHINE variable](#) and in addition for H2 SoC based boards such as Lager change the [MACHINE\\_FEATURES\\_append variable](#) to be "rgx" rather than "sgx".

### Kernel

The kernel config has been changed to accept boot args from u-boot when a combined ulmage+dtb kernel image is used.

## Testing

The update has been tested with Genivi Yocto Baseline 10 and the GDP Master branch tag gdp-10.